

Domus Easy Chair Flex

09887 The Domus chair with its high backrest and removable seat is the perfect chair for a long and comfortable seating position. The Domus chair creates a homely atmosphere in a resident's room, but it also offers an unprecedented surplus value in living rooms or TV rooms.

Support

- The rounded sides consist of 2 OSB boards of 18 mm, and are firmly connected with a metal structure.
- The sides are upholstered with fire-retardant foam.
- The upholstery is finished with imitation leather and decorative stitching.
- Comfortable rounded armrests of ± 5 cm.
- All edges and corners have been rounded.
- No visible fastening elements.
- Design castors $\varnothing 65$ mm with brake.
- Optionally possible on solid beech legs, with aid castors at the back.

Seat

- Removable seat in melaminated MDF, thickness: 12 mm.
- The rounded seat in front stimulates a fluent blood circulation.
- Comfortable seat height of 45 cm.
- Upholstered with fire-retardant foam. Two different density zones guarantee optimal seating comfort.
- The upholstery is finished with imitation leather and decorative stitching.

Backrest


- The backrest consists of an ergonomic pre-shaped plywood shell, thickness 12 mm.
- Upholstered with fire-retardant foam. This foam has 3 different density zones to guarantee optimal seating comfort.
- The upholstery is finished with imitation leather and decorative stitching.
- Equipped with an adjustable and removable head/neck cushion.



Dimension

09887 | Domus Easy Chair Flex:

- L 62 x D 81 x H 115 cm
- Seat height: 45 cm
- Seat depth: 50 cm
- Seat width: 52 cm
- Height armrests: 63 cm

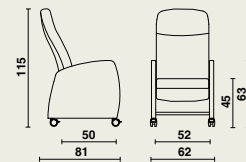

Materials and finishing

- Wood: Solid beech, Plywood, OSB, MDF.
- Metal: epoxy coating (light grey).
- Fire-retardant foam.
- Upholstery: see collection.
- Resistant to the common cleaning products.

For further information about used **materials**, **constructions** and **maintenance**: consult our materialfiles.

Options

- Wooden armrests.
- Dinner tray attachment.
- Abduction block combined with the dinner tray.
- Cushion with visco-elastic foam and a bi-elastic cover.
- Anatomical reduction cushion.
- Armrests with removable upholstery
- Wooden legs and aid castors at the back.

Colours

We would like to refer to our extensive colour gamut.
Sample card + samples available on request.

